


33-570 Checking lower control arm

Checking dimension

Distance "a"
(front edge bearing eye - outer threaded
bore for suspending shock absorber)

148.6 ± 4

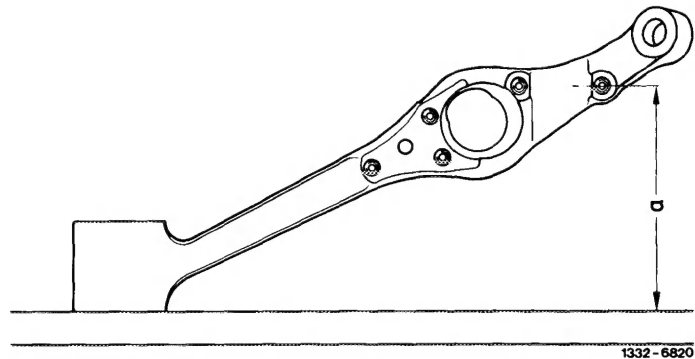


Conventional tool

Height measuring and marking instrument
size III, measuring range up to 500 mm

e.g. made by Stiefelmayer, D-7300 Esslingen
order no. 151 AR

Self-made tool

Hex bolt with center point

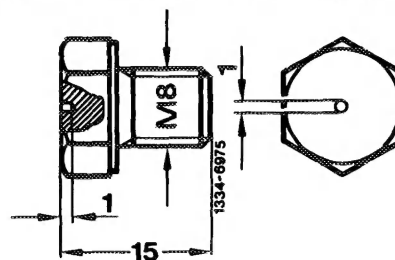

Checkup

- 1 Remove bearing of control arm (33-520).
- 2 Clamp control arm on surface plate at bore for bearing by means of a screw clamp.
- 3 Screw measuring screw into outer bore for shock absorber suspension.
- 4 Measure distance "a" between surface plate and center of center bore in measuring screw. If the specified dimension is above or below specified distance, replace control arm.

